


RRI-SA30511W SHUT-OFF SCREWDRIVER

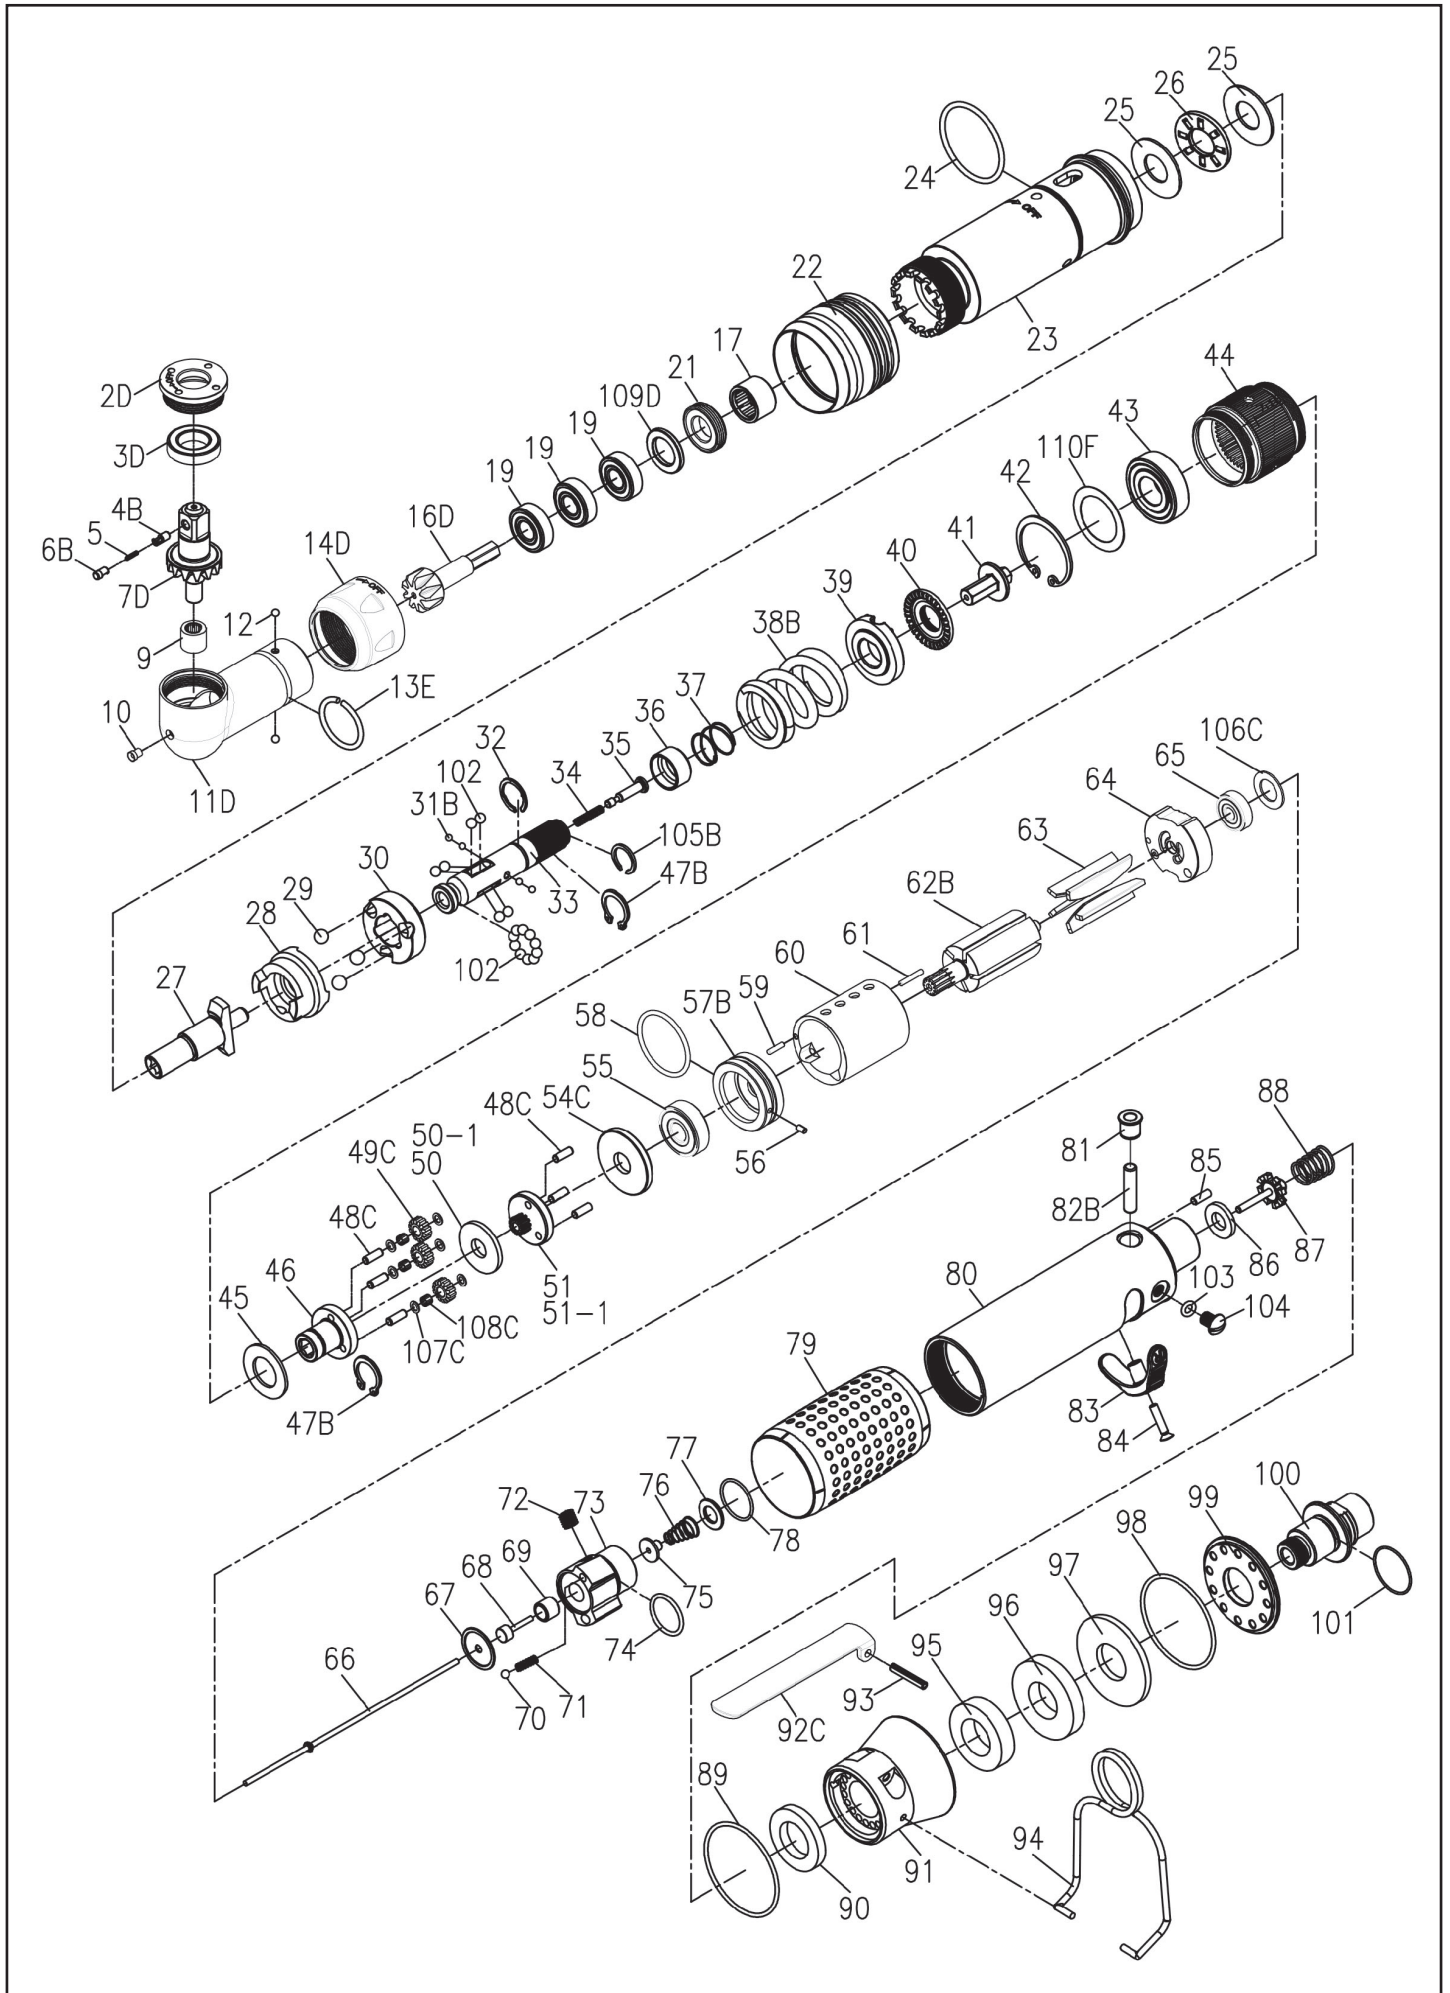

RRI-SA30511W SHUT-OFF SCREWDRIVER

Index No.	Part No.	Description	Q'ty
2D	BS30R-160-706	Lock Nut	1
3D	00-2352	Ball Bearing (6801ZZ)	1
4B	I40S-462-B	Upper Pin	1
5	I40S-464	Spring	1
6B	I40S-463-B	Lower Pin	1
7D	BS30RX-160-730B	Bevel Gear Assy. (3/8" SQ)	1
9	00-2418	Needle Bearing (BK0609)	1
10	00-4603	Grease Fitting	1
11D	BS30R-160-701	Angle Housing	1
12	00-3826	Steel Ball (Ø3)	2
13E	CS20R-708B	Anvil Collar	1
14D	BS30R-160-702	Lock Nut	1
16D	BS30RW-160-704B	Main Bevel Gear	1
19	00-2372	Ball Bearing (698Z)	3
109D	BS20R-300-487B	Washer	1
21	CS30R-709	Lock Nut	1
17	00-2415	Needle Bearing (HK1210)	1
22	B30S-207	Adjusting Cover	1
23	B30R-201	Clutch Housing	1
24	00-41226	O-Ring (Ø29xØ2)	1
25	00-1516	Washer (Ø16xØ26x1t)	2
26	00-2804	Thrust Bearing	1
27	B30R-405	Anvil	1
28	B30S-425	Clutch Ring	1
29	00-3812	Steel Ball (7/32")	3
30	B30S-433	Spring Seat	1
31B	00-3835	Steel Ball (Ø2.5)	4
32	B20S-428C	Anvil Collar C	1
33	B30S-416	Transmission Shaft	1
34	B30-524	Spring	1
35	B30S-527	Piston	1
36	B30S-449	Control Ring	1
37	B20S-427	Spring	1
38B	B30S-429B	Spring	1
39	B30S-431	Adjusting Lock Ring	1
40	B30S-430	Adjusting Nut	1
41	B30S-421	Connecting Shaft	1
42	00-3113	Snap Ring (R28)	1
110F	C20S-422	Washer	1
43	00-2305A	Ball Bearing (6001)	1
44	C20S-440	Internal Gear	1
45	C20S-441	Washer	1
46	C30S-442A	Front Gear Cage A	1
47B	00-3507	Snap Ring (S12)	2
48C	00-3424	Pin (Ø3x8L)	6
107C	33239-WRCA-05	Washer	12
108C	00-3477	Pin (Ø0.5x3L)	132
49C	C30S-443A	Planet Gear A	6
50-1	C20S-444B	Washer B (2m/m)	1
51-1	C20S-452B	Rear Gear Cage B Assem.	1
54C	C30S-448	Rear Cover	1
55	00-2332	Ball Bearing (608ZZ)	1
56	00-3328	Spring Pin (Ø2x4L)	1

Index No.	Part No.	Description	Q'ty
57B	B20S-301	Front Plate	1
58	00-41177	O-Ring (Ø25.12xØ1.78)	1
59	00-3430	Pin (Ø2x8L)	1
60	C30S-302	Cylinder	1
61	00-3447	Pin (Ø2x12L)	1
62B	CS30S-303A-B	Rotor A	1
63	B30S-304	Rotor Blade	5
64	C30S-305	Rear Plate	1
65	00-2355	Ball Bearing (625Z)	1
66	B30SL-314	Valve Stem	1
67	C30SL-525	Washer	1
68	CS30SL-527	Piston	1
69	C20SL-526	Guide Ring	1
70	00-3805	Steel Ball (1/8")	1
71	305F-034	Spring	1
72	00-0606	Screw (M6x6L)	1
73	C30SL-502	Reverse Valve	1
74	00-41117	O-Ring (Ø15xØ1.5)	1
75	CS30SL-514	Shut Block	1
76	CS20SL-515	Spring	1
77	C30SL-533	Washer	1
78	00-41217	O-Ring (Ø16xØ1)	1
79	B20S-103	Housing Rubber	1
80	B30SL-101	Motor Housing	1
81	I40S-509	Bushing	1
82B	IS40S-510	Pin	1
83	C30S-503	Reverse Knob	1
84	00-0509	Screw (M3x16L)	1
85	00-3448	Pin (Ø2.5x8L)	1
86	I40S-508	Bushing	1
87	305C-021	Valve Stem	1
88	C30S-515	Spring	1
89	00-41223	O-Ring (Ø31xØ1)	1
90	C30SL-601	Muffler	1
91	B30SL-603	Exhaust Deflector	1
92C	C20SL-504	Trigger	1
93	00-3308	Spring Pin (Ø3x18L)	1
94	B20S-102	Hanger	1
95	B30S-601A	Muffler	1
96	B30S-601B	Muffler	1
97	B30S-601C	Muffler	1
98	00-41224	O-Ring (Ø38xØ1.5)	1
99	B30S-608	Deflector Cap	1
100	B30S-604A	Air Inlet (1/4"PF-19)	1
	B30S-604B	Air Inlet (1/4"PT-19)	
	B30S-604C	Air Inlet (1/4"NPT-19)	
101	00-41111	O-Ring (Ø16xØ1.5)	1
102	00-3815	Steel Ball (5/32")	16
103	00-41156	O-Ring (Ø3.5xØ1.5)	1
104	00-1304	Screw (M5x6L)	1
105B	B20S-428A	Anvil Collar A	1
106C	BS30R-160-607	Gasket	1